

		<b>Stallions Centuar Maintenance Schedule</b>	<b>Frequency/kms</b>			
No:	Item	Action	<b>1,000</b>	<b>4,000</b>	<b>8,000</b>	<b>12,000</b>
1	Fuel Hose	Check fuel hose for any leaks, cracks or damage. Check hose clips. Replace if required		X	X	X
2	Spark Plug	Inspect, clean and set gap. If in doubt replace. Gap is 0.6mm to 0.7mm	X	X	X	X
3	Valve Clearances	The engine valve clearances should be checked and adjusted if required.	X	X	X	X
4	Air Filter	Remove and clean air filter.	X	X	X	X
5	Front Brakes	Inspect for wear and damage. Inspect hose for any cracks or damage. Replace as required. Check fluid level, top up if required.	X	X	X	X
6	Rear Brakes	As Front Brakes with the addition of checking the adjustment between pedal and master cylinder	X	X	X	X
7	Wheels & Tyres	Check wheels are true. Check for any loose or broken spokes. Inspect tyres for wear, cuts or damage. Rectify any problems.	X	X	X	X
8	Wheel Bearings	Check the wheel hub bearings for wear. Replace if worn.		X	X	X
9	Rear Swing Arm	Check the pivot for wear or movement. Grease if OK, rectify if worn.		X	X	X
10	Frame Mountings & Fixings	Check all fixings to the frame for security. Check nuts and bolts are tight. Check for any cracks or fatigue around the fixing points. Rectify as required.		X	X	X
11	Front Suspension	The front suspension forks should be checked for leaks and operation. Rectify any problems.		X	X	X
12	Rear Suspension	The rear suspension coil over shock absorbers should be checked for leaks and operation. Rectify any problems.		X	X	X
13	Carburettor	Inspect the carburettor for any leaks, rectify immediately. Check the carburettor is set up correctly. Check and adjust idle speed.	X	X	X	X
14	Engine Oil	Drain and replace the engine oil.	<b>Every 1,000kms</b>			
15	Drive Chain & Sprockets	Inspect the chain and sprockets for excessive wear. Replace all as a set if any replacements are being made. lubricate chain.	<b>Every 1,000kms</b>			